EM16 HA Integration Guide - 24.11

Method 1 (Recommended by Refoss)



You can manually add the EM16 to Home Assistant.

Step 1

Ensure that the EM16 firmware is updated to the latest version (3.1.7 and above).

Step 2

Ensure that the Home Assistant is updated to the latest version (2024.11.1 and above).

Visit https://www.home-assistant.io/integrations/refoss/ and follow the instructions to add EM16 to Home Assistant.

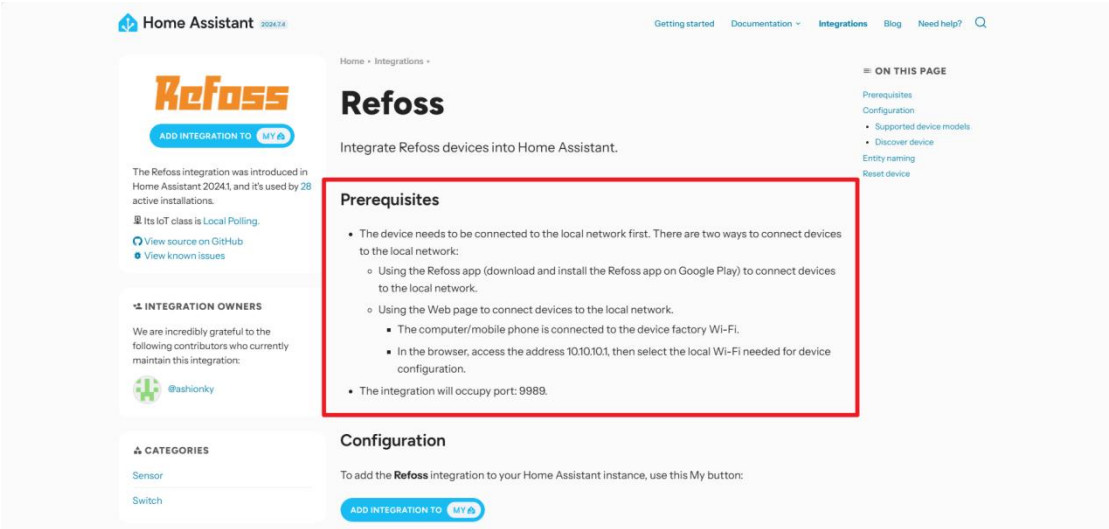

After following this method, you will experience the rich features of Home Assistant.

Method 2 (HACS, for cases where Method 1 is unsuccessful)

Visit https://github.com/Refoss/refoss-homeassistant and follow the instructions to complete the configuration.

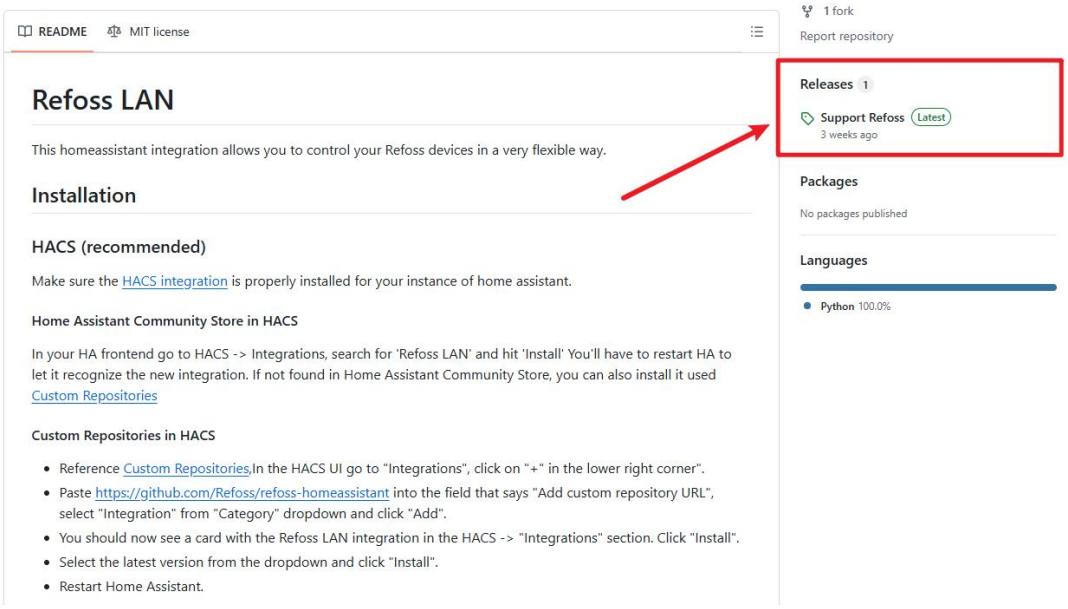

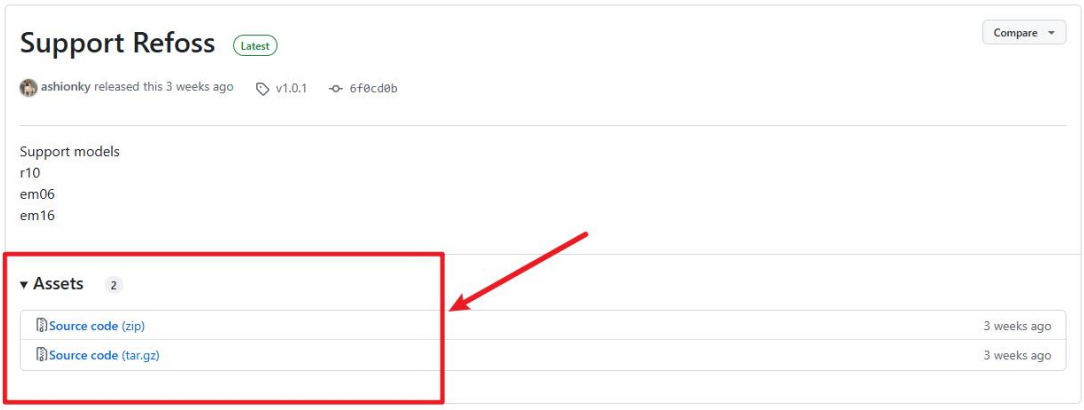

If you have any suggestions during use, please contact support@refoss.net.

Refoss Team
2024.11